



The Sound That Will *Move* You

DBXI SUBWOOFERS

Installation & Reference Manual



Earthquake Sound Corporation
2727 McCone Avenue. Hayward, CA 94545. USA
US Toll Free: 1-800-576-7944 | Tel: 510-732-1000 | Fax: 510-732-1095
www.earthquakesound.com

DBXI SUBWOOFERS

Dear Valued Customer,

Earthquake Sound Corporation, located in Hayward California at the heart of the San Francisco Bay Area; specializes in manufacturing high end car audio products ranging from the smallest titanium tweeter to the world's largest amplifier. In its dedication to excellence, Earthquake has maintained extensive programs in research and development to provide you with the highest quality mobile audio products.

This owners manual is designed to better acquaint you with Earthquake products and to guide you through all phases of system design and application. It is imperative that you read this manual in its entirety. Earthquake technicians and staff are looking forward to answering any questions you might have.

CAUTION: Earthquake's DBXI subwoofers are capable of generating high sound pressure levels. You should exercise caution when operating our subwoofers and amplifiers. Long term exposures to high levels of sound pressure will cause permanent hearing damage. Sound pressure levels exceeding 85dB can be dangerous with constant exposure. Earthquake Sound Corporation does not assume liability for damages resulting from the direct use of DBXI or other Earthquake products , and urges users to play sound systems at moderate listening levels for every day use.



The Sound That Will Move You

Earthquake Sound Corporation

2727 McCone Avenue

Hayward, CA 94545

Tel: 510-732-1000

Fax: 510-732-1095

Customer Technical Support

US Toll Free: 1-800-576-7944

tech@earthquakesound.com

© Earthquake Sound Corporation. All rights reserved.

This document should not be construed as a commitment on the part of Earthquake Sound Corporation.

The information is subject to change without notice. Earthquake Sound Corporation assumes no responsibility for errors that may appear within this document.

EARTHQUAKE SOUND 5-YEAR LIMITED WARRANTY

Earthquake warrants the original purchaser that all Factory Sealed New Audio Products to be free from defects in material and workmanship under normal and proper use for a period of five (5) years from the date of purchase (as shown on the original sales receipt with serial number affixed/written on it).

The five (5) year warranty period is valid only if an authorized Earthquake dealer properly installs the product and the warranty registration card is properly filled out and sent to Earthquake Sound Corporation.

If a non-authorized party installs the product, a ninety (90) day warranty period will be applied.

(A) Five (5) years limited warranty plan coverage guidelines:

- **First year:** Earthquake pays for labor, parts, and ground freight (only in US mainland, not including Alaska and Hawaii) (shipping to us is not covered).
- **Second through fifth year:** Earthquake pays labor only. Customer must pay for parts and freight both ways.

(B) Warning:

Products (sent for repair) that are tested by Earthquake technicians and deemed to have no problem(s) will not be covered by the five (5) year limited warranty. Customer will be charged a minimum of one (1) hour of labor (at the ongoing rates) plus shipping charges back to customer.

(C) Earthquake will repair or replace - at our option - all defective products/parts subject to the following provisions:

- Defective products/parts have not been altered or repaired by other than an Earthquake factory-approved technician.
- Products/parts are not subjected to negligence, misuse, improper use or accident, damaged by improper line voltage or used with incompatible products
- Products/parts with its serial number or any part of it altered, defaced or removed, or have been used in any way that is contrary to Earthquake's written instructions.

(D) Warranty Limitations:

Warranty does not cover products that have been modified or abused, including but not limited to the following:

- Damages to speaker cabinet and cabinet finish due to misuse, abuse or improper use of cleaning materials/methods.
- Bent speaker frame, broken speaker connectors, holes in speaker cone, surround & dust cap, burnt speaker voice coil.
- Fading and/or deterioration of speaker components & finish due to improper exposure to elements.

- Bent amplifier casing, damaged finish on the casing due to abuse, misuse or improper use of cleaning material.
- Product/part damaged due to poor packaging or abusive shipping conditions.
- Subsequent damage to other products.

A warranty claim will not be valid if the warranty registration card is not properly filled & returned to Earthquake with a copy of the sales invoice.

(E) Service Request:

To receive product service, contact Earthquake service department at (510) 732-1000 and request an RMA number (Return Material Authorization). Item(s) shipped without a valid RMA number will be refused. Make sure you provide us with your complete/correct shipping address, a valid phone number, and a brief description of the problem you are experiencing with the product. In most cases, our technicians might be able to resolve the problem over the phone; thus, eliminating the need to ship the product.

(F) Shipping Instructions:

Product(s) must be packaged in its original protective box(es) to minimize transport damage. Shipper claims regarding items damaged in transit must be presented to carrier. Earthquake Sound Corporation reserves the right to refuse improperly packed product. A copy of original sales receipt must accompany product(s) returned for service.

We encourage you to include a written description of the problem inside the package. Ship product to:

Earthquake Sound Corp.
2727 McCone Avenue
Hayward, CA 94545

You are responsible for the cost of shipping the product(s) to Earthquake Sound Corporation.

(G) Disputes Resolution:


All disputes - between clients and Earthquake Sound Corporation - resulting from the five (5) years limited warranty policy must be resolved according to the laws & regulations of the county of Alameda -California.

We recommend that you place or write your serial number here for future reference, if necessary.


SERIAL NUMBER

SPECIFICATIONS & ENCLOSURE DESIGNS


DRIVER:	DBXI-12D
Free Air Resonance (Fs)	24 Hz
Electrical "Q" (Qes)	0.45
Mechanical "Q" (Qms)	4.70
Total Speaker "Q" (Qts)	.5
Xmax	3.5" (88.9mm)
Efficiency (1W/1M)	87 dB SPL
REVC	4.8 Ohm
BL	23.7TM
VAS	1.639 ft ³ (46.4 L)
Nominal Impedance	Dual 4-Ohm
Recommended Power	500 WRMS 1500 Watts MAX

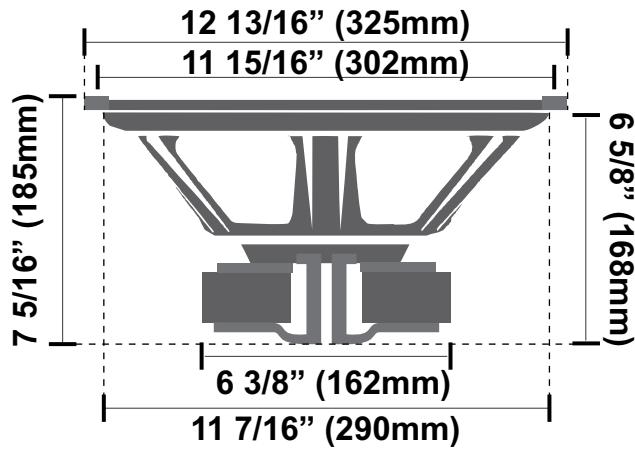


#1 Bass head design for competition
Ported box Recommendation: 1.8-2.5cu.ft.

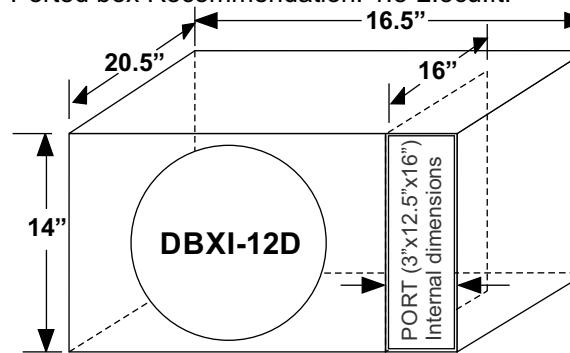

#2 Port tuned design for deep bass
Ported box Recommendation: 1.5-1.75cu.ft.




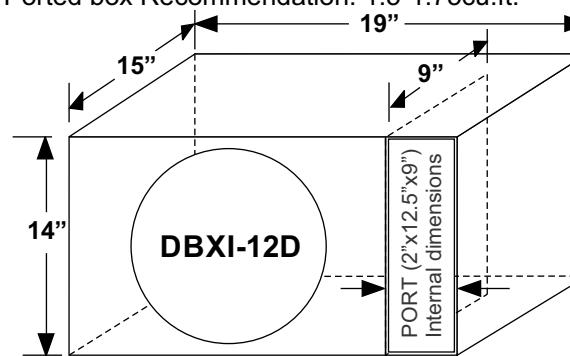


#3 Sealed design for tight bass
Sealed box Recommendation: .9-1.25cu.ft.

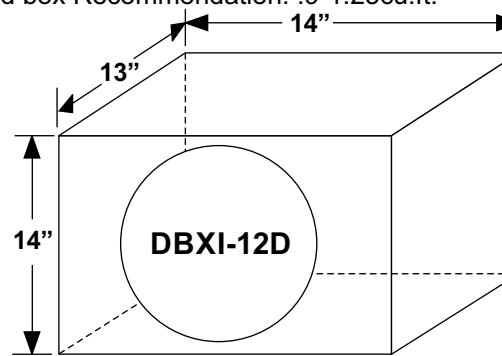


- Constructed using 3/4" MDF wood.
- External dimensions shown, unless written otherwise.
- Designed to play at 44Hz and up.

- Constructed using 3/4" MDF wood.
- External dimensions shown, unless written otherwise.
- Designed to play at 44Hz and up.

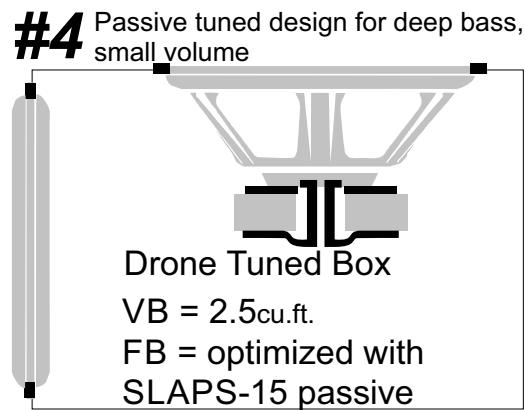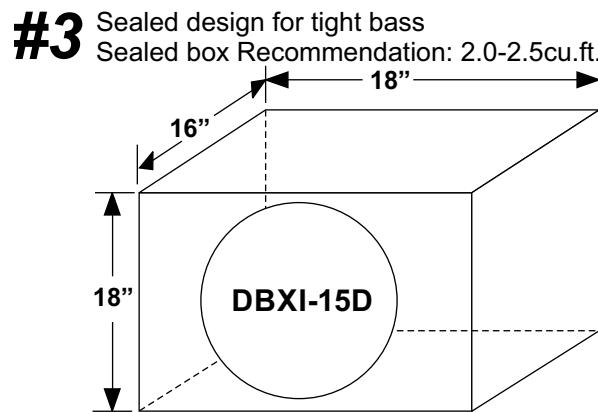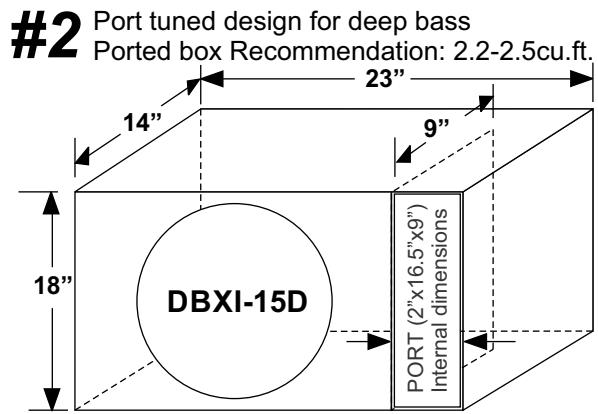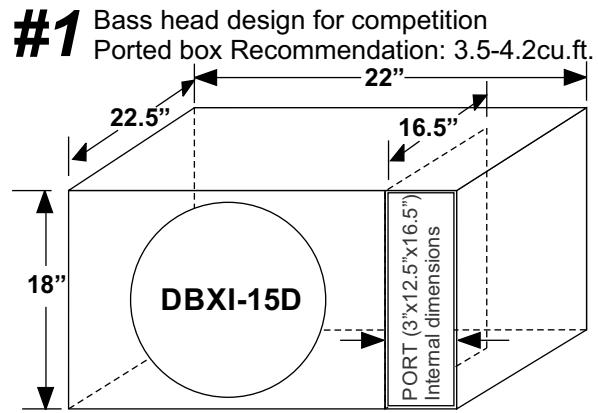

DRIVER:	DBXI-15D
Free Air Resonance (Fs)	20 Hz
Electrical "Q" (Qes)	1.14
Mechanical "Q" (Qms)	5.99
Total Speaker "Q" (Qts)	.45
Xmax	3.5" (88.9mm)
Efficiency (1W/1M)	88 dB SPL
REVC	4.0 Ohm
BL	26.8TM
VAS	3.217 ft ³ 9(91.1 L)
Nominal Impedance	Dual 4-Ohm
Recommended Power	750 WRMS 2000 Watts MAX

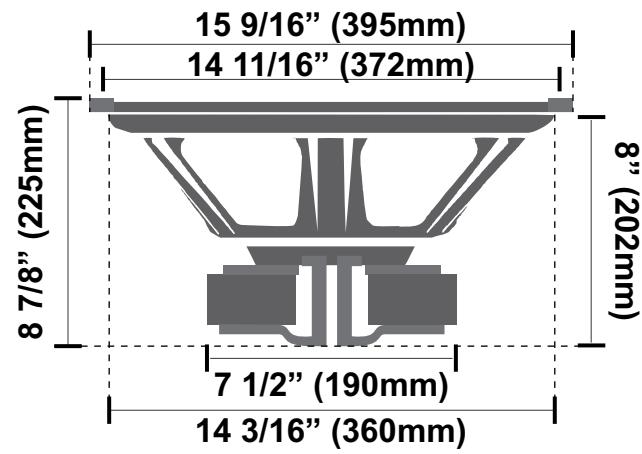


WIRING YOUR DBXI SUBWOOFERS & OHM'S LAW

According to Ohm's Law, when subwoofers are wired in parallel, the formula is:

$$\frac{1}{R} = \frac{1}{R_1} + \frac{1}{R_2} + \frac{1}{R_3} + \dots + \frac{1}{R_n}$$


where R is the system's total impedance.

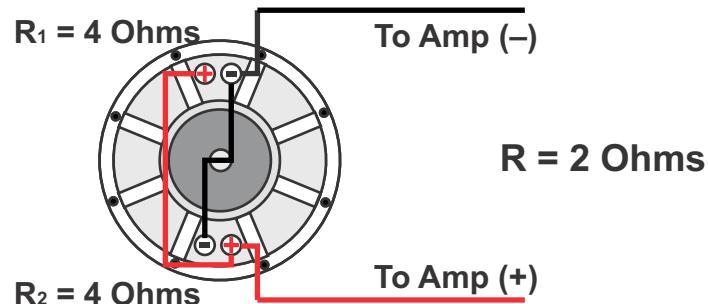


Meanwhile, when the subwoofers are wired in series, the formula is:

$$R_t = R_1 + R_2 + R_3 + \dots + R_n$$

Where R_t is the resistance seen by the amplifier.

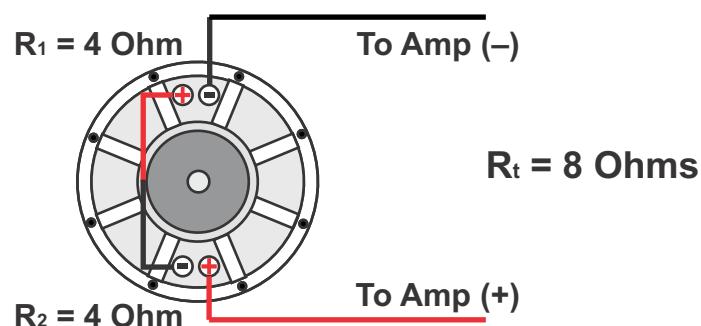

WIRING YOUR DBXI SUBWOOFERS & OHM'S LAW

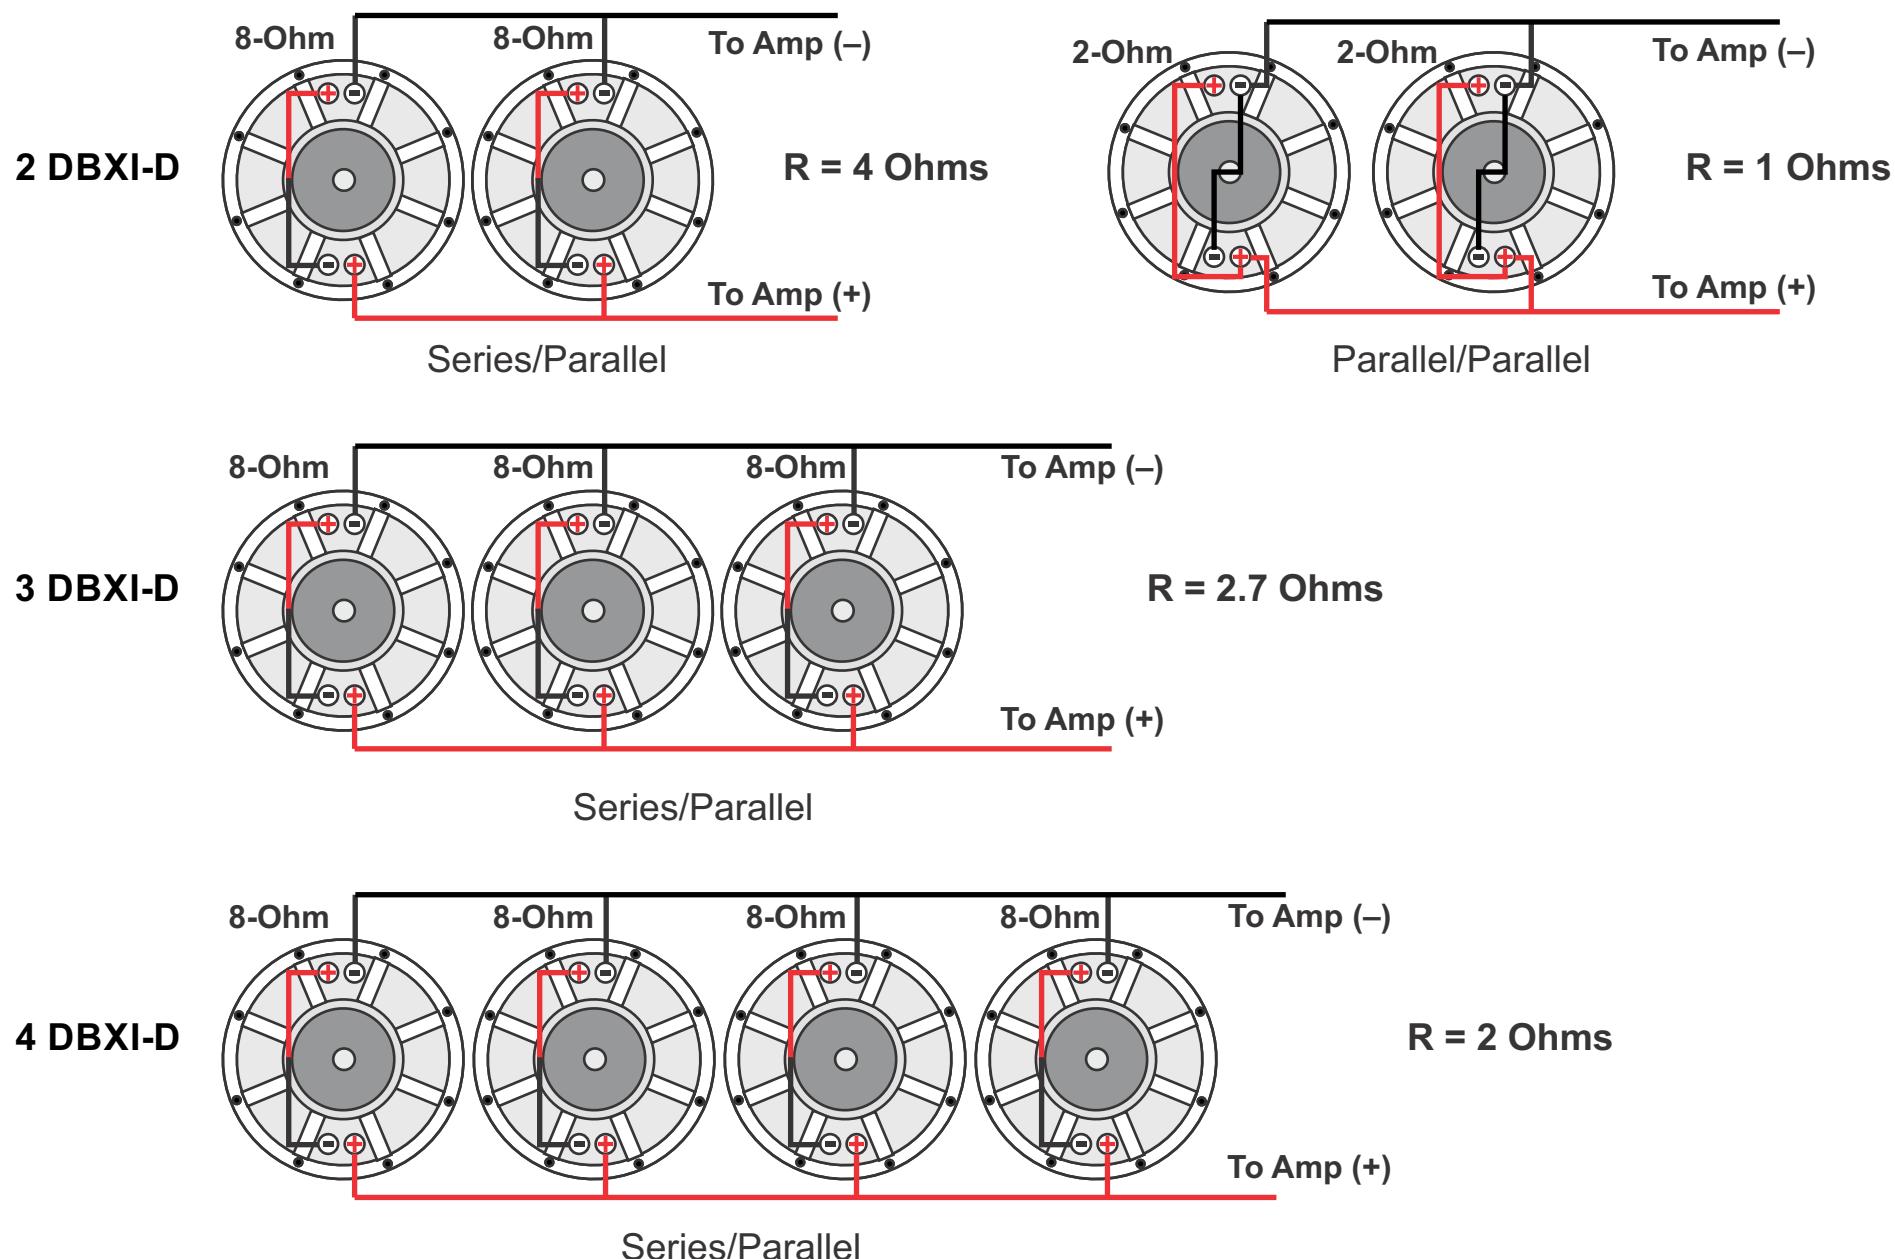



The Sound That Will *Move* You

Earthquake Sound reserves the right to amend details of the specifications without notice.

© Copyright Earthquake Sound Corporation

Earthquake Sound Corporation

2727 McCone Avenue, Hayward, CA 94545, USA

U.S. Toll Free: 1-800-576-7944 | Tel: 510-732-1000 | Fax: 510-732-1095